




Ultrascope for the DS1k series: Bitmap Color Inversion/Black and White

Date:10.18.2011


Solution: The following is the easiest way to save toner by printing a waveform in Black and White.

1. Set up the instrument and capture the waveform of interest.
2. Select the “add a new Waveform” menu icon

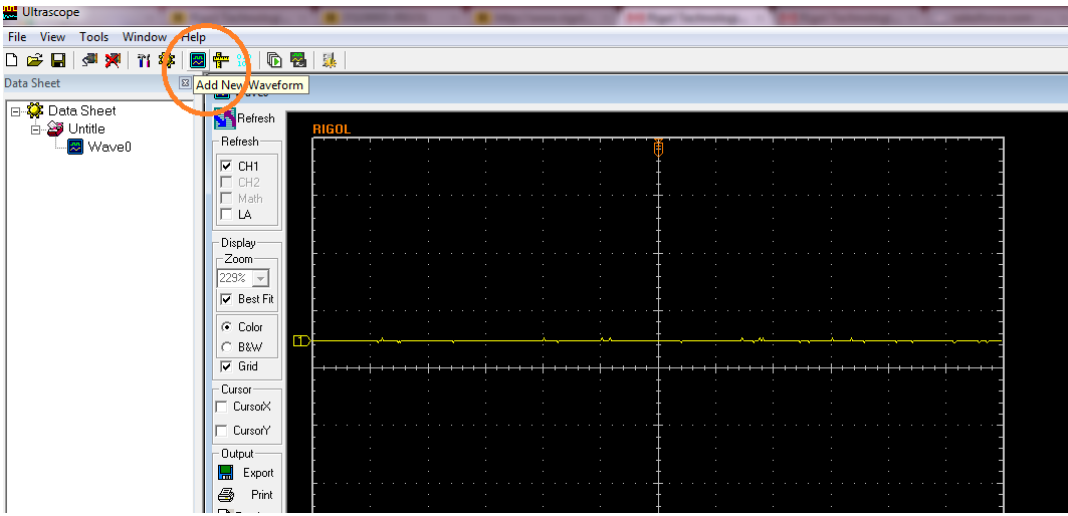



3. Invert colors

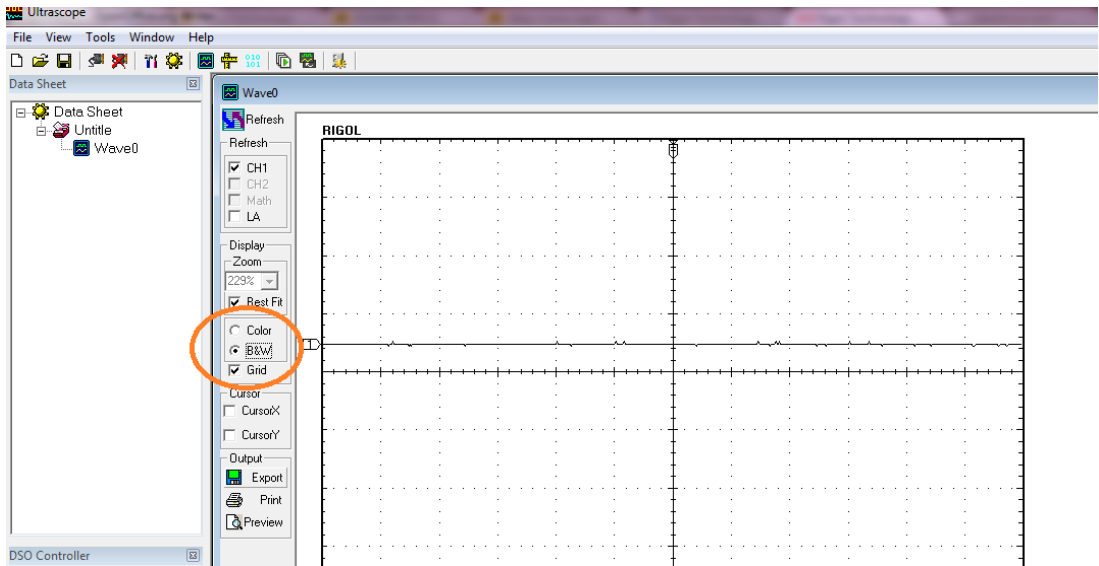

4. You can then print preview, export, etc..

